



How to lock these locks from the outside: you turn the key on the outside Lever or knob.

How to lock these locks from the inside: Push the button on the Inside lever or knob.

